


THP-6000 Series Round Thermostat

User Guide

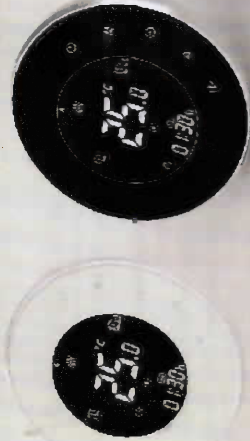

For Water Heating/Boiler/Electric Heating

WiFi Type

Welcome

Thank you for your purchase.

Your new thermostat will provide uniform and comfortable temperature control throughout every room in your property. We bring together technology, craftsmanship and the highest quality materials to provide you with a safe, reliable product combined with sleek, contemporary design.

Please read this installation/programming manual for comprehensive instructions on installing and operating your thermostat. Please also ensure a suitably qualified person installs your thermostat and complies with all local regulations.

In the box you will find

Thermostat	1pc	Screws	2pc
User Guide	1pc	Floor Sensor (2.5m)	1pc
GC Passed	1pc	(Floor sensor is Optional)	

ABOUT YOUR THERMOSTATS

The BHT-6000 range has been developed to control electric underfloor, water heating or water/gas boiler systems. These units are designed for use in commercial, industrial, civil and domestic properties.

MODEL DEFINITION

- WH : Water heating, 3A
- UH : Electric floor Heating, 16A
- GC : Water/Gas Boiler, 3A
- L: Backlight
- P-: Weekly Programmable
- N : Modbus Communication
- B: BACnet Communication
- W: Wifi
- S2: Both internal sensor and floor external sensor

For example: **THP-6000 GCLP**

FEATURES


On Appearance

- Negative black screen will bring you to a secret world.
- 51mm round display area helps to protect your eyes.
- Glass or Acrylic Lens is for your selection.
- Touch buttons to make simple operation.
- Amazing Silver Frame opens your modern life.
- The visible thickness above the wall is only 11mm.
- Rotation to connect gives you easy installation.
- 86mm hidden box and european 60mm round box is suitable.
- White, black or gold housing creates your colorful life.

On Functionality

- Powerful functions are available such as Modbus/WiFi etc.
- 0.5°C Accuracy keeps temperature within the level you set.
- Data memory when power is off.
- 5+1 six periods programmable maximize comfort and economy.
- Great thermostat group to Centralized control
- Interated with **Amazon Echo**, **Google Home**, **Tmall Genie**.
- All setting languages synchronize your time zone, address and language.
- No limit to add rooms and support Smart Scene.

DIMENSION

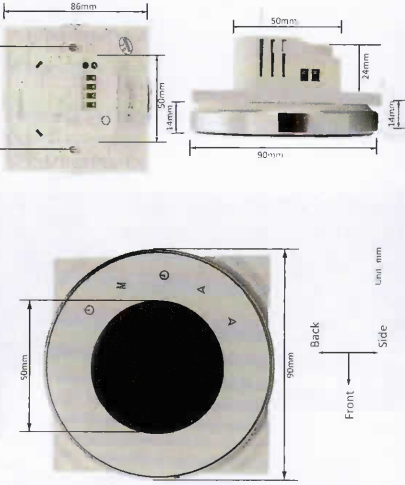

TECHNICAL DATA

Power Supply: 95 ~ 240 VAC, 50 ~ 60HZ
 Current Load : 3A (water heating/water boiler/gas boiler)
 16A (electric heating)

- Sensor: NTC3950, 10K
- Accuracy: ±0.5 C or ±1 F
- Set Temp. Range: 5 ~35 C
- Display Temp. Range: 5 ~ 99 C
- Ambient Temp.: 0 ~ 45 C
- Ambient Humidity: 5 ~ 95 % RH (Non Condensing)
- Storage Temp.: -5 ~ 45 C
- Power Consumption: <1.5W
- Timing Error: < 1%
- Shell Material: PC +ABS (Fireproof)
- Installation Box: 86 * 86mm Square or European 60mm Round Box
- Wire Terminals: Wire 2 x 1.5 mm2 or 1 x 2.5 mm2
- Protection Class: IP 20
- Buttons: Capacitive Touch Buttons

BEFORE WIRING AND INSTALLING


- Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
- Check the ratings given in the instructions and on the product to make sure the product is suitable for your application.
- Installer must be a trained, experienced service technician.
- After installation is complete, check out product operation as provided in these instructions.

CAUTION

Electrical Shock or Equipment Damage Hazard. Can shock individuals or short equipment circuitry.

Disconnect power supply before installation.

WIRING

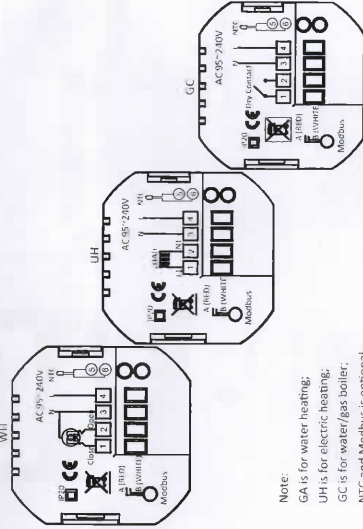

Note:
 GA is for water heating.
 UH is for electric heating.
 GC is for water/gas boiler.
 NTC and Modbus is optional.

INSTALLATION

Your thermostat is suitable for installation within a standard 86mm pattress box or European 60mm pattress box.


Step 1. Keep power off. See Fig 1.

Step 2. Remove the mounting Plate by rotating the LCD part. See Fig 2.




Step 3. Connect power supply, load into the appropriate terminals. (see "Wiring your thermostat" for details and Fig 3).

Step 4. Fix the mounting plate into the wall with screws in the box. See Fig 4.

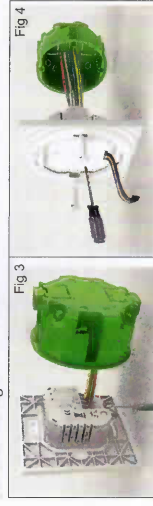


Step 5. Fasten body of thermostat and the mounting plate through rotating. See Fig 5.

Step 6. Installation complete. See Fig 6.

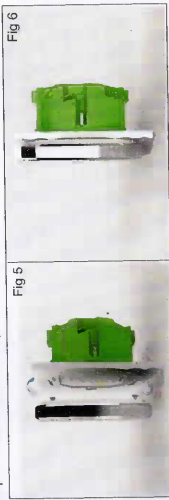

HOME SCREEN QUICK REFERENCE

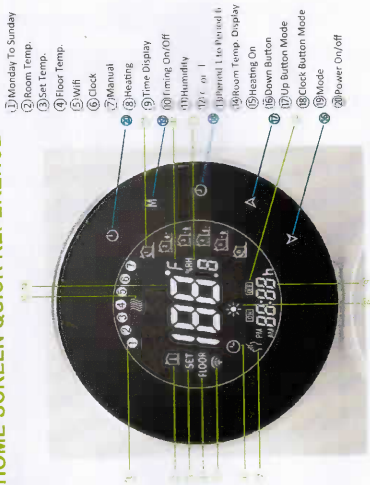

OPERATION

During Power On

- 1. Power On/off:** Press to turn the thermostat on/off.
- 2. Manual & Programmable**
Touch **M** (mode) to change between manual mode and programmable mode. In manual mode, will show in the bottom left of the screen. In programmable mode, the period icon will show in the right side.
- 3. Setting Temperature**
In the mode of programmable, set temperature, time could not be adjusted if the user want to change, please go to manual mode or programmable mode.
In the mode of manual, press **A** to set the desired temperature.
- 4. Adjusting/Setting the Clock**
Touch the icon to set minute, hour and weekday (1 = Monday, 2 = Tuesday etc.) by using the **A** arrows. Press once more to confirm and exit.

- 5. Locking your Thermostat**
Press and hold the **A** for 5 seconds to lock/unlock your thermostat. In item 3 of high senior options, you can select full lock or half lock.

- 6. Adjusting/setting the Program Schedules**
When Wi-Fi connection is made, your thermostat will automatically accept the program schedule made via the APP on your device (see below for detailed instructions). To set the program schedules through your thermostat (NOT via your smartphone/tablet) simply follow the instructions as below:

Please note: **Setting the programme schedule through your thermostat can only be carried out if there is no Wi-Fi connection between your thermostat and smartphone/tablet.**

Touch **M** to change between manual mode and programmable mode. In manual mode, will show in the bottom left of the screen. In programmable mode, touch and hold the icon until the weekday

schedule settings appear (1 2 3 4 5 will show along the top of the screen. Use the **A** and **V** arrows to adjust the on time.

Press the icon and use the **A** and **V** arrows to set the off time (2nd period).

Press the icon and use the **A** and **V** arrows to set the temp.

Repeat this process for periods 3 and 5.

Press the icon once more to enter the Saturday schedule settings (6 will show along the top of the screen).

Repeat the above process to set the period and temp. and Sunday schedule.

Press once more to confirm and exit.

Default settings for program schedule

Time display	WEEKDAY (MONDAY – FRIDAY) (1 & 2: 15:00hrs set temp.)		WEEKEND (SATURDAY) (7: Shows the active)	
	TIME	TEMPERATURE	TIME	TEMPERATURE
Period 1	06:00	20 °C	06:00	20 °C
Period 2	08:00	15 °C	08:00	20 °C
Period 3	11:30	15 °C	11:30	20 °C
Period 4	13:30	15 °C	13:30	20 °C
Period 5	17:00	22 °C	17:00	20 °C
Period 6	22:00	15 °C	22:00	15 °C

A separate schedule may be set for weekdays (Mon – Fri) and for weekends (Sat or Sun).

- 7. Checking the Temperature of Floor Sensor**
Press and hold the **V** arrow for 5 seconds to display the temp. of floor sensor.

During Power Off

Setting the Functions and Options

When power is off, press and hold **M** and at the same time for 5 sec. in order to reach system function. Then press **M** to scroll through the available functions, and use the **A** and **V** arrows to change the available options. All settings are confirmed automatically.

Code	Function	Setting and options	Default
1	Temperature compensation	-7 to +9 °C (for internal sensor)	-1
2	Deadzone temperature	1 to 5 °C	1
3	Button locking	00: All buttons are locked except power button. 01: All buttons are locked In: Internal sensor (to control or limit the temp.) AL: Only external sensor AL: Internal/External sensor (internal sensor to control the temp., external sensor to limit the temp.)	01
4	Sensor types	00: Non-energy saving Mode 01: Energy saving mode.	AL
5	Min. Set Temp.	5-15 °C	05
6	Max. Set Temp.	15-45 °C	35
7	Display Mode	00: Display both set temp. and room temp. 01: Display set temp. only	00
8	Low temperature protection setting	0-10 °C	00
9	High temperature protection setting	25-70 °C	45
A	Economy Mode	00: Non-energy saving Mode 01: Energy saving mode.	0
B	Economy Temp.	0-30 °C	20
C	Standby Brightness	1-99	04

ABOUT WIFI

WI-FI CONNECTION

Before using your Wi-Fi thermostat for the first time, you must configure the Wi-Fi signal and settings through your smartphone or tablet. This will allow communication between your connected devices.

Step 1 Download your APP (Fig 1-1)



Fig 1-1



Fig 1-2 iOS



Fig 1-3 Android

For iOS devices, search for "Smart Life" in Apple Store and download. Alternatively, scan the relevant QR code here (Fig 1-2).

For Android devices, search for "Smart Life" in Google Play and download. Alternatively, scan the relevant QR code (Fig 1-3).

Step 2 Register your account

Open "Smart Life", you will get a piece of notification (Fig 2-1). Click Allow to go into your page of register (Fig 2-2). Press register and enter your phone no. or email (Fig 2-3) then you can get a verification code. Input your password and confirm (Fig 2-4) to complete your registration. If you have an account, please log in.

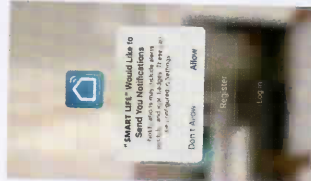


Fig 2-1



Smart Life



Fig 2-2



Fig 2-3



Fig 2-4

Step 3 Connect your Wi-Fi signal

On your thermostat

With power off, press and hold the **▼** arrow for eight (8) seconds. The backlight will be on and the icon **📶** will flash one time per sec..

Then, go back to the home page of your app

Press the **+** on the upper right corner of the page (see Fig 3-1-1) to add your device. Click Confirm indicator rapidly blink (see Fig 3-1-2) then select your network and back to your app to enter the password of your wireless router (Fig 3-3) and confirm. The app will connect automatically (Fig 3-4). This may typically take up to 5~90 seconds to complete. Your room name could be edited when the device is connected (Fig 4.4).

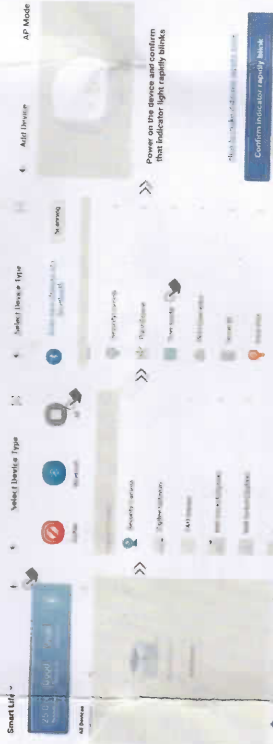


Fig 3-1-1

Fig 3-1-3

Fig 3-1-2



Fig 3-3



Fig 3-4

This is EZ mode which provides fast network connection between your app and your device. If your router doesn't support it or your wifi signal is weak or you can not connect by EZ mode, press the AP Mode on the upper right corner in Fig 3.2.

If you have connected your thermostat successfully, please ignore the AP setting as below.

On your thermostat

With power off, press and hold the **▼** arrow for eight (8) seconds. The backlight will be on and the icon **📶** will flash one time per sec.. Press and hold the **▼** arrow for eight (8) seconds again. The icon **📶** will flash one time every (3) seconds.

Then, go back to the home page of your app
Click Confirm indicator slowly blink (Fig 4-1) then select your network and back to your app to enter the password of your wireless router (Fig 3-3) and confirm. The app will go into the page in Fig 4-2.

Press Connect now to select the wifi signal SmartLife-CE4A of your thermostat (Fig 4-3).

Go back to your app and click Connect now then the app will connect automatically (Fig 3-4). This may typically take up to 5~90 seconds to complete. Your room name could be edited when the device is connected (Fig 4-4).



Fig 4-1



Fig 4-3

PROGRAMMING YOUR THERMOSTAT

When your room is established successfully, it will display on the heating cool home screen (Fig 5-1). The round button is to turn on/off your room. Click the line into beginning programming your thermostat.

Power on/off button. When the screen is bright, it is power on; when the screen is dark, it is power off.

Mode button. In this mode you can set cooling, heating and ventilation. **🌡️** is cooling, **🔥** is heating and **🌬️** is ventilation.

Fan Speed button. Press this button to select auto, low, med and high speed. **🌀** is auto speed, **🌀** is low speed, **🌀** is med speed, and **🌀** is high speed.

Manual button. In this mode your heating can be set manually (i.e. NOT using the pre-programmed settings)

Program button. When this button shows, your thermostat is in program mode and will follow any pre-set heating schedule. When in Manual mode, press the **🕒** button to select mode **🕒** and vice-versa.

Economy button. In this mode, the temperature will be kept at 26 degree. This temperature cannot be changed or adjusted (Fig 5-4).

Lock/Unlock button. If button is green, the screen is "locked". If button is grey, the screen is "Unlocked"

* Slide the yellow button backwards or forwards to manually adjust the temperature, the temperature will show in the centre

Fig 4-2

of the page. After a few seconds the current room temperature will show.

- * When in Program mode, click on the schedule setting (at the bottom of the page) to be taken to the schedule page (See Fig 5-2) where you can simply click on the working days (Mon-Fri) and then the time/Temp. to adjust to your preferred schedule.
- * You can set 6 periods - time and temp. (Fig 5-3)
- * Repeat the above after clicking on the Weekend (Sat-Sun) settings at the top of the page
- * Once your schedule has been set, click on SAVE and the app will send the programming to your thermostat and confirm the schedule has been saved.



Fig 5-1



Fig 5-2



Fig 5-3

How to create a group?

Press the menu button in the red circle (Fig 5-2) then click **Create Group** (Fig 6-1). Select all the rooms you want and confirm.



Fig 6-1



Fig 6-2

The one who create this group can control all the rooms at the same time.

Note

Except create the group, in this menu page, you can also modify your device name, share your device, get the information of your device.

How to share your device with your family member?

- Way 1: Mentioned in the above.
- Way 2: Click your Profile at the right bottom of your main page (Fig 6-2). Select Device Sharing then add the account you want to share. You can see the sharing account you have sent and the device you have shared in this sharing page. You don't need to do anything if you are the one shared. You can add as many as rooms you want.

How to connect your device to Amazon Echo or Google Home

In your profile, click **Integration** into the using page. Press **Use Now** > (Fig for your Amazon Echo or Google Home or Tmall Genie or IFTTT then you can see the operation steps.



Fig 7-1



Fig 7-2

What is your Smart Scene and How to use it?

Customize your own personal scenes to suit your needs. For example, set your home to automatically turn on thermostat when you back home (Fig 7-2). Press + button into the setting.

Step 1: You can set a condition for Task like Temperature below 20 degree, then click Save. (Condition: Temp., Humidity, Wether, PM2.5, Air Quality, Sunrise/Sunset, Device)

Step 2: Add a task. Press + to Select Device (Power, Set Temp, Lock Mode) to act, then Save. If you want to delete the scene, you can press Delete in the end.

NOTE: The room sound could be turned on/off in PROFILE-SETTING-SOUND. The sound is matched with the default of your system.

SIMPLE EXCEPTION HANDLING

No.	Phenomenons	Handling
1	Power is on but without display.	* Check if the terminals between LCD panel and Power Unit Box is loosen. * Use a new LCD panel or new Power Unit Box to replace the old one.
2	Without output but display works.	* Do temperature calibration in item 1 of high sensor options
3	Room Temp. is a little different from the actual.	

SERVICE

Your thermostat carries an 24 months warranty from date of purchase. Service outwith the warranty period may incur a charge. More detail please contact with us directly.